

Configuración de perfiles de APN y asignación de Slot

Ricardo Cuevas Alvarado

ricardo.cuevas@wamtech.com



En este script, serán explicados los pasos para configurar los perfiles de APN asignándolos a un Slot determinado, con el fin de que si falla la conexión de la principal, el equipo intente comunicarse por medio de la secundaria.

- Mobile
- Serial Ports
- Camera
- Alarms
- System
- iDigi
- Users
- Position

Applications

- Python
- RealPort

Management

- Serial Ports
- Connections
- Event Logging
- Network Services

Administration

- File Management
- X.509 Certificate/Key Management
- Backup/Restore
- Update Firmware
- Factory Default Settings
- System Information
- Reboot

Logout

Mobile Profiles			
Priority	Service Provider	SIM	Status
1	Custom Provider	1	Enabled
2	None Selected	N/A	Not configured
3	None Selected	N/A	Not configured
4	None Selected	N/A	Not configured



▼ **Mobile Settings**

Select the service provider, service plan, and connection settings used in connecting to the mobile network.

These settings are provided by and can be retrieved from the service provider.

Mobile Service Provider Settings

Service Provider:

Enable CHAP authentication

Username:

Password:

Enable PAP authentication

Username:

Password:

Dial String:

Init String:

Luego de haber configurado el primer perfil, elija un perfil que se encuentre disponible para configurar en base a la SIM que posea el SLOT 2.

Mobile Profiles			
Priority	Service Provider	SIM	Status
1	Custom Provider	1	Enabled
2	None Selected	N/A	Not configured
3	None Selected	N/A	Not configured
4	None Selected	N/A	Not configured

Obtendrá algo similar a esto:



Home

Configuration

- Network
- Mobile
- Serial Ports
- Camera
- Alarms
- System
- iDigi
- Users
- Position

Applications

- Python
- RealPort

Management

- Serial Ports
- Connections
- Event Logging
- Network Services

Administration

- File Management
- X.509 Certificate/Key Management
- Backup/Restore
- Update Firmware
- Factory Default Settings
- System Information
- Reboot

Logout

Mobile Configuration

Select a mobile profile to configure. Settings on this page apply to the selected profile.

Mobile Profiles			
Priority	Service Provider	SIM	Status
1	Custom Provider	1	Enabled
2	None Selected	N/A	Not configured
3	None Selected	N/A	Not configured
4	None Selected	N/A	Not configured



Mobile Settings

Select the service provider, service plan, and connection settings used in connecting to the mobile network.

These settings are provided by and can be retrieved from the service provider.

Mobile Service Provider Settings

Service Provider:

Mobile Connection Settings

- Enable this connection. This selection will not disconnect an established connection.
An established connection may be disconnected from the [Connections Management](#) page.
- Re-establish connection when no data is received for a period of time.

Inactivity timeout: seconds

Para este ejemplo, se configura para una SIM Entel basándonos en el “Basic Script Digi”:

- Mobile
- Serial Ports
- Camera
- Alarms
- System
- iDigi
- Users
- Position

Applications

- Python
- RealPort

Management

- Serial Ports
- Connections
- Event Logging
- Network Services

Administration

- File Management
- X.509 Certificate/Key Management
- Backup/Restore
- Update Firmware
- Factory Default Settings
- System Information
- Reboot

Logout

Mobile Profiles			
Priority	Service Provider	SIM	Status
1	Custom Provider	1	Enabled
2	None Selected	N/A	Not configured
3	None Selected	N/A	Not configured
4	None Selected	N/A	Not configured



Mobile Settings

Select the service provider, service plan, and connection settings used in connecting to the mobile network. These settings are provided by and can be retrieved from the service provider.

Mobile Service Provider Settings

Service Provider:

Service Plan / APN:

Username: (Optional)

Password: (Optional)

SIM Slot: Slot 1 Slot 2

Mobile Connection Settings

- Enable this connection. This selection will not disconnect an established connection. An established connection may be disconnected from the [Connections Management](#) page.
- Re-establish connection when no data is received for a period of time.

Inactivity timeout: seconds

Apply

Set to Defaults

Camera
Alarms
System
iDigi
Users
Position

Applications

Python
RealPort

Management

Serial Ports
Connections
Event Logging
Network Services

Administration

File Management
X.509 Certificate/Key
Management
Backup/Restore
Update Firmware
Factory Default Settings
System Information
Reboot

Logout

Mobile Profiles			
Priority	Service Provider	SIM	Status
1	Custom Provider	1	Enabled
2	Custom Provider	2	Not installed
3	None Selected	N/A	Not configured
4	None Selected	N/A	Not configured



Mobile Settings

Select the service provider, service plan, and connection settings used in connecting to the mobile network. These settings are provided by and can be retrieved from the service provider.

Mobile Service Provider Settings

Service Provider: Custom Provider

Enable CHAP authentication
Username: entelpcs
Password: *****

Enable PAP authentication
Username: entelpcs
Password: *****

Dial String: *99***1#

Init String: "AT&C1 OK,AT+CGDCONT=1,"IP,"042,042im

SIM PIN:

SIM Slot: Slot Slot 2



Mobile Connection Settings

Enable this connection. This selection will not disconnect an established connection. An established connection may be disconnected from the [Connections Management](#) page.

Re-establish connection when no data is received for a period of time.
Inactivity timeout: 1440 seconds

Aquí pueden quedar guardados 4 perfiles, lo que permite tener distintos APN para un Slot dando prioridad a la que se encuentre puesta en el Digi, para fines prácticos, resulta útil para no estar configurando el APN cada vez que se cambie la SIMCARD.

Mobile Profiles			
Priority	Service Provider	SIM	Status
1	Custom Provider	1	Enabled
2	Custom Provider	2	Not installed
3	None Selected	N/A	Not configured
4	None Selected	N/A	Not configured

Update Firmware
Factory Default Settings
System Information
Reboot

Logout

Password:

Enable PAP authentication

Username:

Password:

Dial String:

Init String:

Condiciones para el switcheado de perfiles:

▼ Profile Selection

Stop using this profile and switch to the next profile:

- If the modem is not registered after seconds
- If roaming with this profile
- After connection failures with this profile

Luego de X seg sin que el modem se registre a la red.

Luego de 3 intentos fallidos con el perfil actual.

Retornar al perfil principal cuando:

Disconnect this profile and return to the first profile:

- When the connection is dropped
- If the connection is idle for seconds
- After a maximum of seconds

Apply

Set to Defaults

Cuando la conexión se caiga.

Luego de X seg. Sin conexión a la celda PCS (*)

Luego de un máximo de X seg.

(*) : Se recomienda utilizar sobre 180 segundos.

Luego de esto, queda automatizado el cambio de SimCard en función los perfiles configurados.

**Ante Cualquier inquietud, no
dude con comunicarse con
nosotros**

soporte@wamtech.com

Ricardo Cuevas

ricardo.cuevas@wamtech.com

